

# **Multi-media Player**

## **User Manual**

[DVP-506]

## Contents

<b>1. SAFETY INSTRUCTIONS</b> .....	1
<b>2. Instruction</b> .....	3
<b>3. Package Contents</b> .....	3
<b>4. Unit Diagram</b> .....	4
4.1 FRONT PANEL.....	4
4.2 REAR PANEL.....	5
<b>5. Remote Control</b> .....	5
5.1 Remote Control Definition.....	5
5.2 Installation of Batteries.....	6
<b>6. Connection</b> .....	6
6.1 Connect to TV via standard Audio/ Video cable (included).....	7
6.2 Connect to an amplifier via coaxial digital audio output.....	7
6.3 Connect TV and Projector Via HDMI Cable (included).....	8
<b>7. Basic Player Operation</b> .....	8
7.1 Before you begin.....	8
7.2 PLAY.....	8
7.3 PAUSE.....	9
7.4 FORWARD/REVERSE SCAN.....	9
7.5 SKIP NEXT/PREVIOUS.....	9
7.6 STOP.....	10
<b>8. Additional Features Explained</b> .....	10
8.1 Use USB Memory Sticks / Thumb Drives.....	10
8.2 JPEG (Picture) MP3 Discs Operations.....	11
8.3 Repeat Feature.....	11
<b>9. Setting</b> .....	11
<b>10. Technical Specifications</b> .....	16
<b>11. Trouble Shooting</b> .....	17

# 1. SAFETY INSTRUCTIONS

Please save this instruction. You may need it in the future.

Here are some basic safety precautions that you should carefully follow as you use the player. Read all instructions carefully! We're not responsible for damage or injuries caused by improper use of the appliance.

- 1) READ ALL INSTRUCTIONS.
- 2) Remove any packaging material before using this appliance.
- 3) Moisture - Do not expose this apparatus water or moisture. To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the Discs player. If liquid enters the unit, unplug the device immediately. Be sure to install the player in an area where access to the AC power cord is available so that the unit may be unplugged from the wall socket immediately in the event of trouble or if liquid is spilled onto the unit.
- 4) NOTE: If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player and the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.
- 5) Heat - The Discs player should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
- 6) Proper ventilation - Do not install this player in a confined space, such as a bookshelf or similar unit unless proper ventilation is provided. Slots and openings in the Discs player casing are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface as ventilation will be inhibited and overheating will occur.
- 7) Overloading - Do not overload wall outlets, extension cords, or integral convenience receptacles, as this can result in a risk of fire or electric shock.

- 8) Cleaning - Unplug this product from the wall outlet before cleaning. If dusting or cleaning is required, be sure to clean the outer portion of the casing only. Do not attempt to clean the inside or to disassemble the casing. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning and be sure to allow the unit to dry completely before plugging the unit to a power source.
- 9) To protect against electric shock do not immerse cord, plugs or appliance in water or any other liquid.
- 10) Close supervision is necessary when your appliance is being used by or near children.
- 11) Keep the appliance and its cord out of reach of children aged less than 8 years.
- 12) If the supplied power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 13) Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- 14) Any use of this product which is not recommended by manufacturer may cause injury to persons or damage to appliance.
- 15) Place appliance on flat surface or table. Do not hang its power cord over the edge of table or counter. En- sure that the power cord does not touch hot surface of appliance.
- 16) If the unit requires servicing, refer servicing to qualified service personnel. If the unit is still under warranty, contact our service center. See terms and conditions specified under the warranty included with this product.
- 17) Do not use appliance for other than intended use.
- 18) Do not use outdoors.

**FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS**

## 2. Instruction

Congratulations on your purchase of the DVD player. This DVD player is a great way to enjoy your discs without the clutter of a full size player.

Its compact design provides easy access to all your favorite media, and the fast search backwards/forwards will guarantee that you never miss a minute.

Watch from a distance using the remote control, or use the zoom in feature to get a closer look. It is a great way to ensure quality entertainment within minutes.

Before using your player, it is recommended that you familiarize yourself with the features, functions, and operating procedures described in this manual. Due to slight modifications in production, the instructions, features, and descriptions found in this manual might be slightly different from your product. Design and specification subject to change without notice.


## 3. Package Contents

Please verify your box for the following items. Note that some models may not include all items.

Multi-media Player	1pcs
Remote Control (without battery)	1pcs
HDMI Cable	1pcs
AV Cable	1pcs
User Manual	1pcs


## 4. Unit Diagram

### 4.1 FRONT PANEL

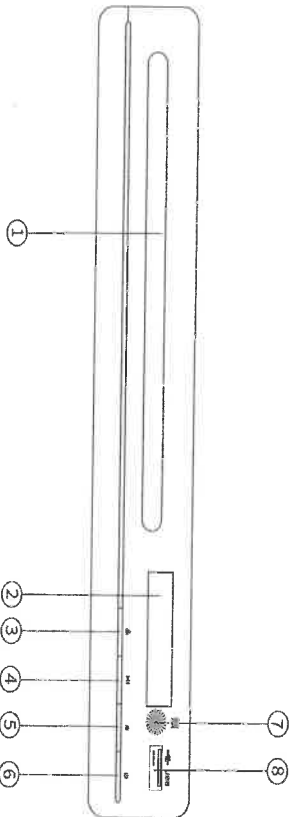

1. Discs Door
2. Display Window
3. Open/Close Button
4. Play/Pause Button
5. Stop Button
6. Standby Button
7. Remote Receiver Window
8. USB Jack


### 4.2 REAR PANEL

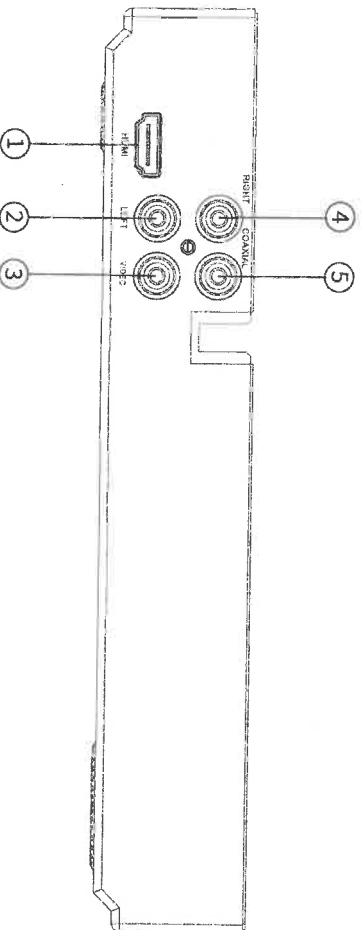

1. HDMI Output Jack
2. Audio Left Output Jack
3. Video Output Jack
4. Audio Right Output Jack
5. Coaxial Digital Output Jack

## 5. Remote Control

### 5.1 Remote Control Definition

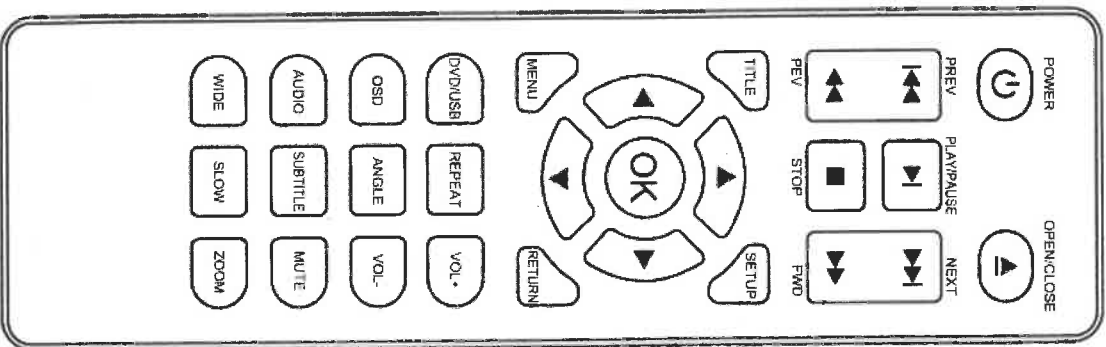

- Power:** Press to turn the power On/off or restore the player to standby mode
- OPEN/CLOSE:** Press to open and close the disc drawer.
- PREV:** Press to return to the previous title, chapter, or track
- NEXT:** Press to skip to the next title, chapter, or track.
- SEARCH REV :** Press to scan backward. Press again to increase scan speed ( 2x, 4x, 8x, 16x, 32x).
- SEARCH FWD:** Press to scan forward. Press again to increase scan speed ( 2x, 4x, 8x, 16x, 32x).
- PLAY/PAUSE:** Press to play or pause a loaded disc.
- STOP:** Press to stop a Discs or CD during play.
- TITLE:** Press to access the title menu of a loaded discs.
- SETUP:** Press to access or exit the setup menu
- ARROWS UP/RIGHT/LEFT/DOWN -** Press directional buttons to navigate through menu screens.
- OK:** Press to confirm selections within on screen menus or the setup menu.

5

- MENU:** Open the main menu
- RETURN:** Press to go back to disc main menu (with PBC on)
- DVD/USB:** To select between discs and USB
- REPEAT:** Press to enable repeat play of track or tracks.
- OSD:** Press to view the various On Screen Display modes.
- ANGLE:** Press to access different camera angles on supported discs
- VOL + :** Press to INCREASE the volume.
- VOL - :** Press to DECREASE the volume.
- Audio:** Press to change the audio settings
- SUBTITLE:** Press to turn available subtitles on or off
- MUTE:** Press to mute or un-mute the volume.
- WIDE:** Switch to 4:3 or 16:9 screen size
- SLOW:** Slow playback
- ZOOM:** Image zoom in/

**In No disc status, long press ZOOM button (5-10s) to reset the player**

### 5.2 Installation of Batteries

1. Press and lift the back cover up to open the battery compartment of the remote control.
2. Insert two AAA size batteries. Make sure that the polarities of the batteries ( + ) and ( - ) match those of the battery compartment.
3. Close the battery compartment cover.


## 6. Connections

When connecting this unit to other components, be sure that all devices are turned off. Audio/Video cables are connected according to different color identification and should be fitted firmly into the appropriate jacks.

6


## 6.1 Connect to TV via standard Audio/ Video cable ( included)

- A. Connect the supplied RCA Audio/Video cable using the red(right) and white(left) cables to the Audio jacks on the rear of the DVD player and to the Audio Inputs on your TV.
- B. Connect the video cable (yellow) to the Video jack on the rear of the player to the Video Input on your TV.
- C. Set your TV to its appropriate Video input

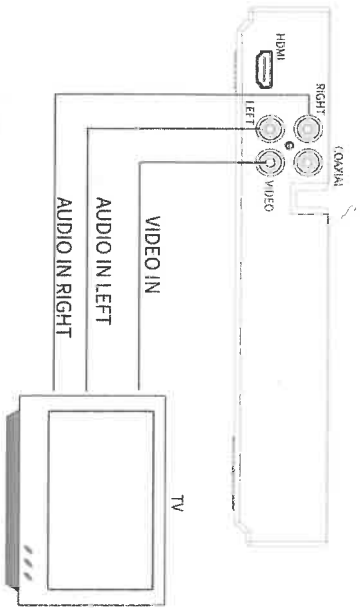

## 6.2 Connect to an amplifier via coaxial digital audio output

- A. Connect the supplied RCA Audio/Video cable using the red and white cables to the Audio jacks on the rear of the player and to the Audio Inputs on your TV.
- B. Connect the video cable (yellow) to the Video jack on the rear of the player to the Video Input on your TV.

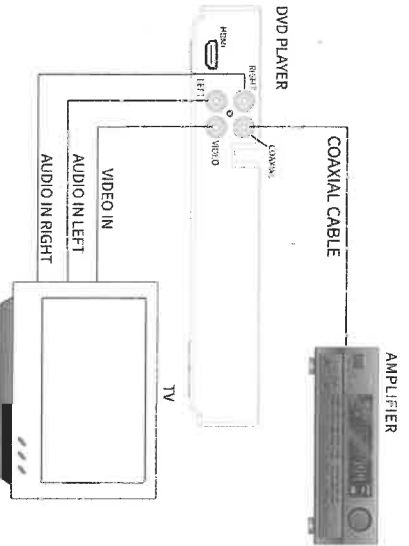


7

- C. Connect a digital coaxial cable (not included) to the coaxial cable jack on the rear of the player and to the coaxial digital audio input on your digital receiver or amplifier.

## 6.3 Connect TV and Projector Via HDMI Cable (included)

- ◆ Connect an HDMI cable to the HDMI jack located on the rear of the Discs player.
- ◆ Connect an HDMI cable to the HDMI Input jack on your television.

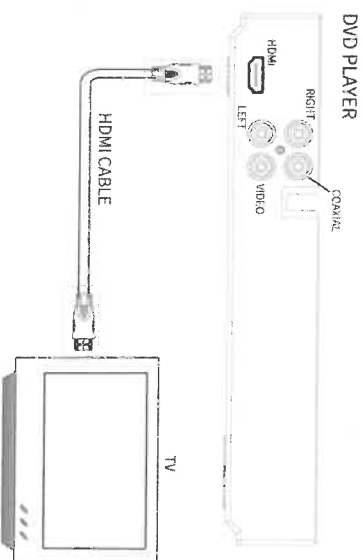

## 7. Basic Player Operation

### 7.1 Before you begin

Turn on your TV. Select the appropriate video input settings to correspond to the input used when connecting to the Discs player. Refer to the "Connections" section of this manual.

If you have connected the player to an audio system (stereo or amplifier) turn on your audio system and select the appropriate audio input settings to correspond to the input used when connecting to the Discs player.

Note: As TV and/or audio systems vary, please refer to your TV or Audio system user's manual.

### 7.2 PLAY

- Press the POWER button on the player or press the Power/Standby button on the remote control.

8

- Press OPEN/CLOSE button (on the player or remote control) to open the disc tray.
- Hold the edge of the disc and place it in the tray with the label side up.
- Press OPEN/CLOSE button (on the player or remote control) again to close the disc tray.

The DVD player starts playback or opens the disc menu automatically. Use the directional buttons and the ENTER button to navigate the disc's menu screen. If the discs does not automatically begin playing, press PLAY (on the player or remote control).

Note: The auto-load sequence of each Audio discs, CD, VCD disc may vary according to format and/or the way the disc was authored. Some discs will auto-play a series of previews, copyright notices, or advertisements before loading the Menu screen. Certain buttons on the remote control, such as the MENU, TITLE, F.RWD, F.FWD, PREV, NEXT, and GOTO buttons, may be automatically disabled until the auto-load sequence is completed.

### 7.3 PAUSE

To pause, press the PLAY/PAUSE button once during playback. To resume, press the PLAY/PAUSE button again.

### 7.4 FORWARD/REVERSE SCAN

Press REV or FWD during playback.

To increase the Fast Forward or Rewind speed, press the REV or FWD button again to choose the desired speed (Normal, x2, x4, x8, x16, x32)

### 7.5 SKIP NEXT/PREVIOUS

- You can skip to a specific chapter or track during playback.
- Skipping Ahead - Press NEXT during playback.
- You will advance to the next chapter/track each time you press the NEXT button.
- Skipping Back - Press PREV during playback.

- If you press the PREV button midway through a chapter, the DVD player returns to the beginning of the chapter. The player then skips a chapter each time you press the PREV button.

### 7.6 STOP

- This Discs player has a "Last Played" memory feature. When you press stop, it will retain the position so that you can resume play from this point, even after turning the Discs player off.
- Press STOP once to stop and hold playback at the current position. Pressing Play will resume play from the current position.
- Press STOP twice to completely stop and reset the disc to the beginning. The "Last Played" feature will not be activated.

## 8. Additional Features Explained

### 8.1 Use USB Memory Sticks / Thumb Drives

- Turn off the DVD player.
- Insert the USB Memory Stick to the USB Port on the front of the DVD player.
- Turn on the DVD player. Press and hold the DVD/USB button on the remote control.
- The Folder/Files list will appear on the screen.
- Use the arrow buttons to select and highlight the desired folder or file.
- Press the ENTER button to confirm and begin playback.

#### Note:

1. USB Stick Format: FAT / FAT32, storage up to 32GB
2. USB Playback support:
  - ≤720\*480/576 Video (MPEG/MPG/VOB/AVI/MP4/MOV/SWF/3GP);
  - Audio (MP2/MP3/WMA/OGG);
  - Image (JPG/GIF/TIF).

## 8.2 JPEG (Picture) MP3 Discs Operations

- ✦ Turn on the player and place the disc or USB Memory stick into the player as indicated on previous procedures. The Folder/Files list will appear on the screen.
- ✦ Use the directional buttons to select and highlight the desired folder. Press the ENTER button. The file list will appear on the screen.
- ✦ Using the directional buttons to select and highlight the desired file. Press the ENTER button to begin play-back.

## 8.3 Repeat Feature

- During playback, press the REPEAT button repeatedly to select: Repeat Single: Play the current track repeatedly
- Repeat Folder: Play the tracks in the current folder repeatedly Off: Resume normal playback

## 9. Settings

### 9.1 Enter into Main Set Up Page

- ✦ Press the SETUP button. The setting menu will appear on the screen.
- ✦ Use the directional buttons to select and highlight the function you need to configure.
- ✦ Press the OK button to confirm the selection.
- ✦ Press the RETURN button to exit

### 9.2 General Setup Page

This page allows you to configure the TV System, Screen Saver, Video, Resolution, TV Type, Password, Dating, Default Settings.

#### 9.2.1 TV System

This DVD player supports NTSC / PAL/ AUTO systems.

If you select an output type that is not supported by your TV, the screen will flicker with a black and white display.

Press the SETUP button and use the arrow buttons to select the correct TV type from this list.



#### 9.2.2 Screen Saver

Screen saver function is used to prevent display damage. You can select screen saver ON/ OFF in this menu.

After activate the screen saver function, a screen saver image appears on the screen if the player is in no disc or stop status for 3 minutes.

The initial setting is: ON

#### 9.2.3 VIDEO

You can see the video input is CVBS

#### 9.2.4 Resolution

You can select different resolution in this menu.

#### 9.2.5 TV Type

You can select TV display size of 4:3 PS, 4:3 LB or 16:9 to match the aspect ratio of your TV and then press the OK button to confirm your selection.



### 9.2.6 Default

Use this feature to reset customized defaults to the original settings for the unit (except password).

**Shortcut for Resetting:** Take out the disc first, under the No Disc status, press the **ZOOM** button on the remote control directly to reset the player.

### 9.3 Language Setup

This page allows you to set the OSD Language, Audio LANG, Subtitle LANG, Menu LANG, RESUME.



#### 9.3.1 OSD Language

You can select your desired OSD language from this menu: English, German, Spanish, French, Portuguese.

#### 9.3.2 Audio LANG

You can select the preferred language when watching discs: English, Chinese, Japan, Spanish, French, Portuguese, Latin, German.

#### 9.3.3 Subtitle LANG

You can set the preferred subtitle languages: English, Chinese, Japan, German, Spanish, French, Portuguese, OFF.

### 9.3.4 Menu LANG

You can set the preferred Menu languages: English, Chinese, Japan, Spanish, French, Portuguese, Latin, German.

### 9.3.5 Power Resume

You can select Resume ON / OFF in this menu.

This player has a "Last Played" memory feature. When you press stop, it will retain the position so that you can resume play from this point, even after turning the Discs player off.

### 9.4. Audio Setup Page

This page allows you to configure the Audio output settings.



### 9.5 Picture Setup Page

This page allows you to set the picture features: Brightness, Contrast, HUE, Saturation, Sharpness.



### 9.6 Speaker Setup Page

This DVD player support Downmix mode: LT/RT, Stereo, VSS. This sets the audio down-mix mode to convert multichannel audio into two channel output. This setting only affects the Mixed L/R analogue audio outputs.



## 10. Technical Specifications

- Power source: 100-240V~, 50/60Hz, 12W
- Power Consumption: 12W
- Remote Control: DC 3V, 2xAAA batteries (not included)
- Video Signal System: AUTO/NTSC/PAL
- Frequency Response:  $\pm 1\text{dB}$ (20Hz~20KHz)
- Signal Noise Ratio:  $\geq 90\text{dB}$
- Audio Distortion:  $\leq 1\%$
- Channel Separation:  $\geq 80\text{dB}$ (1KHz)
- Dynamic Range:  $\geq 80\text{dB}$ (1KHz)
- Audio Out (Output Level):  $2 \pm 0.1\text{V}$ ;
- Analog Audio: Load Impedance  $10\text{K}\Omega$
- Video Out (Audio Out): Output Level:  $0.5\text{Vp-p}$ ;
- Digital Signal: Load Impedance:  $75\Omega$
- Video Out Output Level:  $1\text{Vp-p}$
- Load Impedance:  $75\Omega$ , imbalance, negative polarity
- Laser Power: Class 1
- Supported Discs: CD, CD-R/RW, DVD, DVD-R/R+, DVD-/R+, DVD-/RW, DVD-Video, DVD-R DL

## 11. Trouble Shooting

Problem	What to Check
The power light does not come on	Plug the power cord into a wall outlet Try a different outlet Select the appropriate video input format on your TV in order to receive the player's output signals.
No Picture	Fully insert the plugs on the video cable into the corresponding jacks. Fully insert the plugs on the audio cable into the corresponding jacks. Turn on the stereo/amplifier system (if applicable). Select the correct output in the setup menu.
No Sound	Remove and clean the disc Some distortion may occur during the FORWARD and REWIND operations. This is normal.
Distorted Picture	Connect the player directly to your TV NOTE: Disruptions can be caused by copy protection systems on a discs
Flickering or unstable brightness	Be sure that a disc is loaded Be sure that the disc is compatible (check the disc's format and color signal coding standard) Check that the disc is correctly loaded Clean the disc Be sure that the Discs player settings are correct
The DVD remote controller does not work	Point the remote controller at the sensor. Check that the remote control is no more than 20 feet from the sensor. Replace the batteries with new batteries.
No response when buttons are pressed	Switch player, unplug the power cord, and then plug in the power cord and switch it on again.

### Q&A:

- Black screen/Black and white screen after connect TV without any setting?
  - This DVD player supports Multi (AUTO), NTSC, and PAL systems. If you selected or default output type that is not supported by your TV, the screen will flicker with a black and white display.
  - Press the SETUP button and use the arrow buttons go to the preference
- Device is very noisy when reading disc also playback.
  - The device has a little noise when reading the disc at the very beginning.

But if it is noisy when playback, it maybe defective or damaged during shipping. Please contact us to get a new replacement with your Order ID and shipping address.
- Why the DVD player can't read the files on USB flash drive?
  - 1. Please check your USB Stick Format: FAT / FAT32, storage up to 32GB.
  - 2.USB Playback only support ≤720\*480 / 720\*576 Video
- Doesn't read any disc?
  - 1<sup>st</sup>, make sure the disc format is correct.
  - 2<sup>nd</sup>, clean the disc and laser head with a microfiber cloth, also make sure the disc is full insert the disc tray.
  - 3<sup>rd</sup>, unplug the power cord, and then plug in the power cord and switch it on, change another disc to try again.
- The Disc Tray doesn't open or close? Or suddenly no screen after changing the DVD player's setting ?
  - Unplug the power cord, and then switch it on again. Take our disc from the DVD player and long press "Zoom" button (5-10s) on the remote controller. The DVD player will be reset automatically.

If your problem is not listed here or problem didn't solved via the FAQ, please contact our Customer Support!